



Electrical Trouble ▶ Burned-out Light Bulb

Position Light Bulb

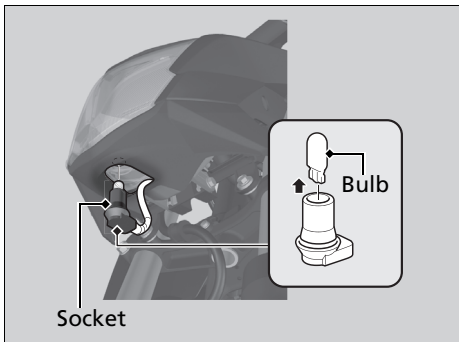

1. Pull out the socket.
2. Pull out the bulb without turning.
3. Install a new bulb in the reverse order of removal.

Brake/Tail Light Bulb

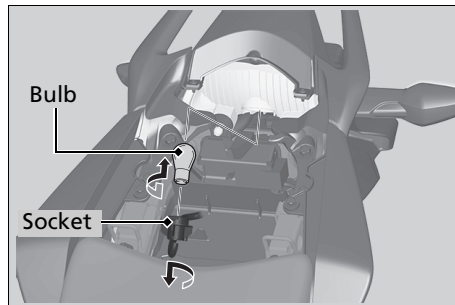

1. Remove the rear seat. ▶ P. 49
2. Turn the socket counterclockwise, and remove it.
3. Slightly press the bulb in and turn it counterclockwise.
4. Install a new bulb and parts in the reverse order of removal.
5. Install the rear seat.