


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is located below the indicator panel.

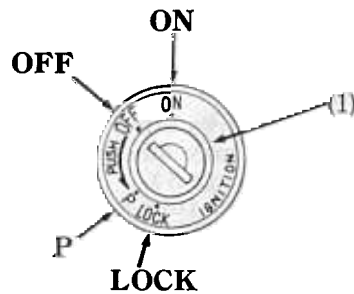

(1) Ignition switch

Key Position	Function	Key Removal
LOCK (steering lock)	Steering is locked. Engine and lights cannot be operated.	Key can be removed
P (parking)	For parking the motorcycle near traffic. The taillight is on, but all other lights are off. The engine cannot be started.	Key can be removed
OFF	Engine and lights cannot be operated.	Key can be removed
ON	Headlight, taillight and instrument lights are on and other lights can be operated. Engine can be started.	Key cannot be removed

RIGHT HANDLEBAR CONTROLS Engine Stop Switch

The engine stop switch (1) is next to the throttle grip. When the switch is in the RUN position, the engine will operate. When the switch is in the OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the RUN position.

NOTE:


* If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will still be on, resulting in battery discharge.

Starter Button

The starter button (2) is below the engine stop switch (1).

When the starter button is pressed the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

See pages 41 – 42 for “Starting Procedure.”

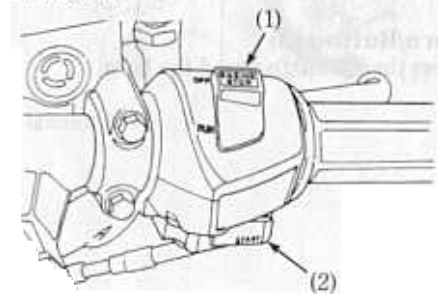

(1) Engine stop switch
(2) Starter button