

NOTE:

* Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

Installation Note:

To install the front wheel assembly, position the wheel between the fork legs. Insert the front axle from the left side, through the left front fork leg and wheel hub.

Install and tighten the axle bolt to the specified torque. Tighten the axle pinch bolts to the specified torque.

Axle bolt torque:

60 N·m (6.0 kg-m, 43 lb-ft)

Axle pinch bolts torque:

22 N·m (2.2 kg-m, 16 lb-ft)

After installing the wheel, apply the brakes several times, and check for free wheel rotation when released.

▲WARNING

* If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.