



# Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

<b>Importance of Maintenance</b> .....	P. 42	<b>Engine Oil</b> .....	P. 64
<b>Maintenance Schedule</b> .....	P. 43	<b>Coolant</b> .....	P. 68
<b>Maintenance Fundamentals</b> .....	P. 46	<b>Brakes</b> .....	P. 70
<b>Tool kit</b> .....	P. 57	<b>Side Stand</b> .....	P. 72
<b>Removing &amp; Installing Body Components</b> ..	P. 58	<b>Drive Chain</b> .....	P. 73
Rear Seat .....	P. 58	<b>Clutch</b> .....	P. 77
Front Seat .....	P. 59	<b>Throttle</b> .....	P. 80
Side Cover .....	P. 60	<b>Crankcase Breather</b> .....	P. 81
Headlight Assembly .....	P. 61	<b>Other Adjustments</b> .....	P. 82
Clips .....	P. 62	Rear Suspension .....	P. 82
Battery.....	P. 63	Headlight Aim .....	P. 83
		Brakelight Switch .....	P. 83

