


Removing & Installing Body Components ► Headlight Assembly

Headlight Assembly

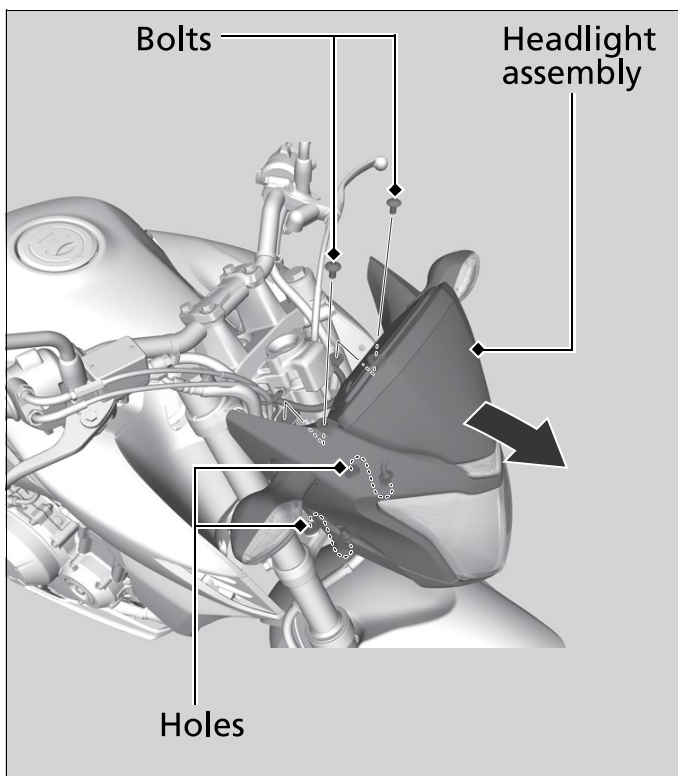

The headlight assembly must be removed to replace the headlight bulb and position light bulb.

When removing and installing the headlight assembly, be careful not to damage the wire harness.

Removal

1. Remove the bolts.
2. Remove the headlight assembly by releasing it from the holes of the bottom bridge.

Installation

Install the parts in the reverse order of removal.

Maintenance