

Electrical Trouble ► Blown Fuse


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ▣ P. 49

Fuse Box Fuses

1. Remove the front seat. ▣ P. 59
2. Remove the fuse box covers.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Install the fuse box cover.
5. Install the front seat.

(CB500F)

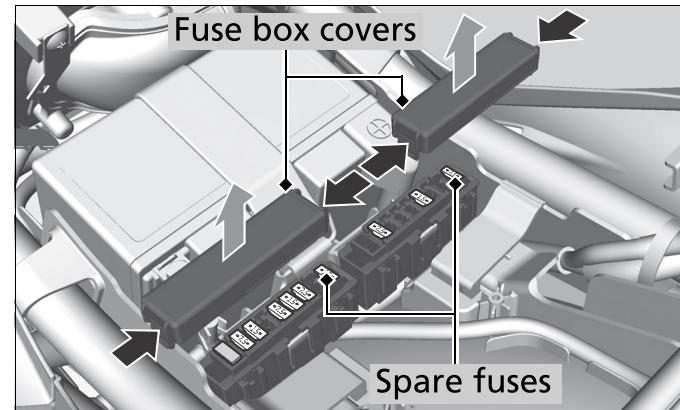

(CB500FA)

