

Ref. No.	Description	Function
6	Turn signal indicator lamp (amber)	Lamp will be flashing while the turn signal is operating.
7	Oil pressure warning lamp (red)	<p>After turning on the main switch but before starting engine, check to make sure the oil pressure warning lamp is functioning (lamp comes on).</p> <p>The oil pressure warning lamp comes on when the main switch is switched on; it goes off when the engine is started and the prescribed engine oil pressure reached. Should the lamp light up while driving, it is an indication of a malfunction in the lubricating system, in which case, the motorcycle must be stopped at once, the engine turned off, and the engine oil level checked. If the check reveals that the engine oil level is within the prescribed limits, the cause of the malfunction will have to be determined and corrected by contacting the nearest HONDA dealer. However, an occasional flickering of the warning lamp at or near idling speeds when the engine is at operating temperature, is of no concern since low oil pressure is normal at low-speed.</p>
8	Neutral indicator lamp (green)	Lamp will be on when the transmission is in neutral.