


switch is in the "ON" position. Refer to main switch page 13.

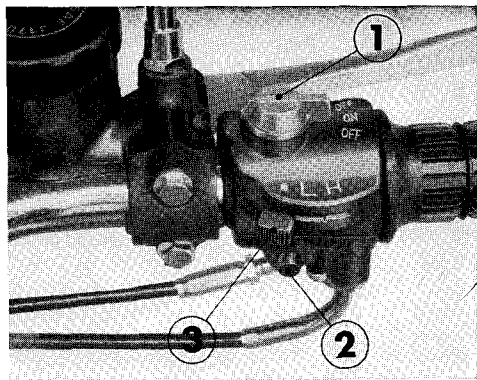

- ① Ignition switch ② Starter switch
③ Headlight control switch

STOP LIGHT SWITCHES

These switches operate the stop light when the front or rear brake is applied. The front brake switch is incorporated in the front brake hydraulic system and requires no adjustment. The rear brake switch, which is an adjustable plunger type, is located near the rear brake pedal (See page 80).

HORN BUTTON

This is a push button switch ② located directly below the turn signal switch ①. While the horn button switch is depressed the horn will operate. (See page 16).