


## TURN SIGNAL (CONTROL) SWITCH

This is a sliding switch ① located on the left handle grip switch housing. It can be operated without taking the hand off the handle grip. To signal a left turn, move the switch knob to the "L" position. To signal a right turn, move the switch knob to the "R" position. When the turn has been completed the switch knob must be returned to the center "OFF" position.

- ① Turn signal switch      ② Horn button

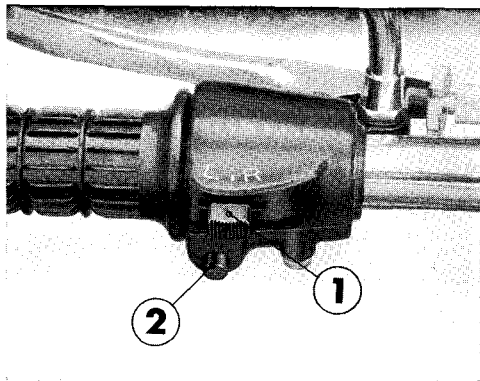

## MECHANICAL CONTROLS

### STEERING LOCK

The steering lock ① is located on the steering stem directly below the head light case. Turn the handle bar all the way to the steering stop, either to the

left or right, insert the key into the lock, turn key 60° to the left, press in, and then turn the key back to the original position and remove the key. This locks steering to prevent theft.