


CLUTCH (CONTROL) LEVER

The clutch lever ① is located at the left handle grip. Squeezing the lever towards the handle bar grip disengages the clutch. Gradually releasing the lever will result in smooth clutch engagement. The clutch lever should have 0.4–1.0 inch (10–25 mm) free play measured at the lever end. See page 52 for adjustment information.

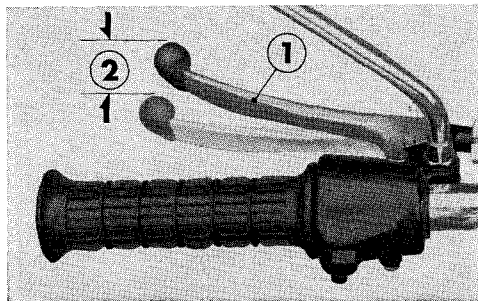

① Clutch lever ② 0.4-1.0 in. (10-25 mm)

KICK STARTER PEDAL

The kick starter pedal located at the right side of the engine can be used to start the engine in event the battery charge is too low to crank the engine with the electric starter. Operate the kick starter pedal with the right foot, starting from the top of the stroke and following through with a rapid and continuous kick.

CAUTION:

Do not allow the kick starter pedal to snap back freely against the pedal stop.
