


FUEL CONTROL VALVE

The fuel valve ② is located at the left under side of the fuel tank. When the fuel valve is in the "STOP" position, fuel can not flow from the fuel tank to the carburetors. The fuel valve should be set in this "STOP" position when the motorcycle is parked. Turning the fuel valve to the "ON" (straight down) position allows fuel to flow to the carburetors from the main fuel supply.

Turning the fuel valve to the "RES" position allows fuel to flow from the reserve supply. The fuel valve should be turned to the "RES" position only when the main fuel supply is exhausted, thereby allowing you to proceed to the nearest service station. The fuel valve also incorporates a filter screen and sediment bowl which requires periodic inspection and cleaning. (See page 47)

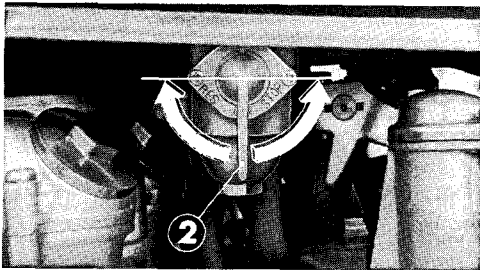

② Fuel valve