

- c. After completing the adjustment, tighten the lock nut ①.

**NOTE:**


**Do not apply additional pressure on the tensioner bolt.**

**AIR CLEANER**


Air cleaner element cleaning and/or replacement depends on motorcycle operating conditions. Your HONDA dealer can help you to determine the fre-

quency of cleaning and replacing the element.

- a. Raise the seat and remove the tool case together with the air cleaner cover.
- b. Lift out the air cleaner element retaining clip ②. Remove the air cleaner element ③ and clean it by tapping lightly to loosen dust then using a soft brush, the remaining dust can be brushed from the outer element surface or apply compressed air from

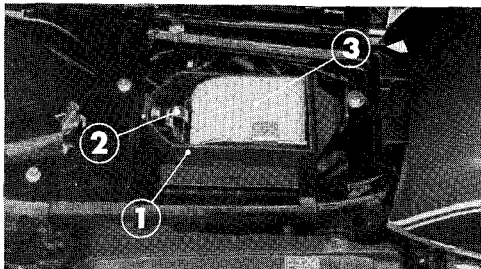

① Air cleaner case    ② Retaining clip

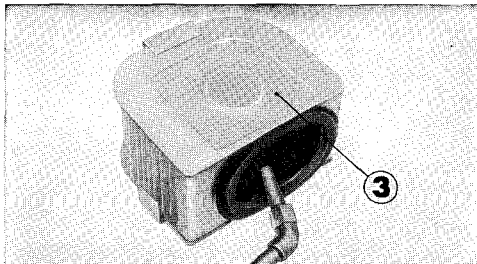

③ Air cleaner element