


and squeeze the lever all the way down. Do not release the lever until the bleeder valve has been closed again. Repeat this procedure until bubbles cease to appear in the fluid at the end of the hose.


- e. Remove the bleeder hose, tighten the bleeder valve and install the bleeder valve dust cap.
- f. Do not allow the fluid reservoir to

become empty during the bleeding operation as this will allow air to enter the system again. Replenish the fluid as often as necessary while bleeding.

- g. Check for proper effect of bleeding and absence of leaks in the front brake lines while holding pressure against the brake lever. Replenish fluid in the reservoir when bleeding is completed. Reinstall the diaphragm,

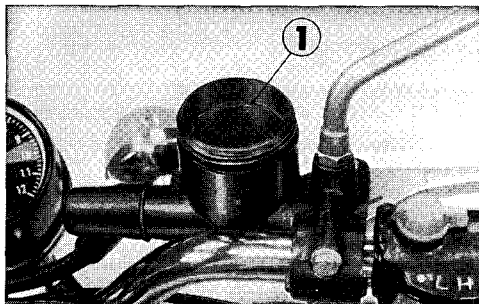

① Level line

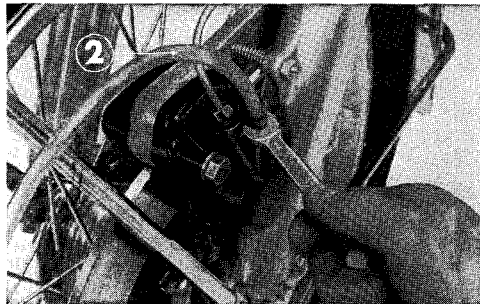

② Bleeder hose