

## 7. Rear Brake Shoes

Inspect the lining of the brake shoes for thickness and evenness of wear at specified intervals in the MAINTENANCE SCHEDULE (page 36). To examine the brake shoes, remove the rear wheels according to the instruction on page 66. Replace brake shoes with only HONDA genuine replacement brake shoes when thickness of lining becomes 0.08 in (2.0 mm).

---

### NOTE:

**When service is necessary on the brakes, consult your HONDA dealer.**

---

## WHEEL REMOVAL AND INSPECTION

### 1. Front Wheel Removal

Removal of the front wheel is performed in the following manner.

- Raise the front wheel off the ground by placing a support under the engine.
- Remove the speedometer cable ① from the front wheel hub assembly.
- Remove the axle holder fixing nuts ② and the front wheel assembly can be removed from the front fork.

To install the front wheel reverse the sequence outlined above.

---

### NOTE:

- With the front wheel removed the friction pads can be taken out of the caliper assembly and measured for wear (see page 61).
- Do not depress the brake lever when the wheel is off the motor-