


cycle as this can cause the caliper piston to be forced out of the cylinder with subsequent loss of brake fluid. If this does occur servicing of the brake system will be necessary (see page 58-61).

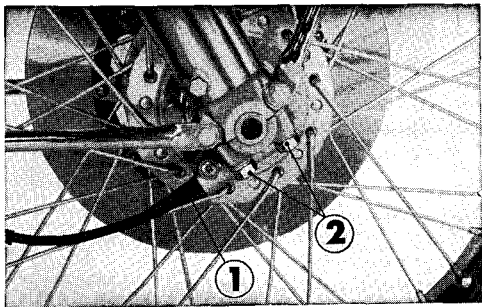


- ① Speedometer cable
- ② Axle holder fixing nuts

2. Rear Wheel Removal

Removal of rear wheel is performed in

the following manner.

- a. Place the motorcycle on the center stand.
- b. Remove the rear brake adjusting nut ① and actuating rod from the brake arm ②.
- c. Remove rear brake plate torque arm lock pin ③, nut ④, washer ⑤, and bolt ⑥.
- d. Remove the cotter pin and loosen the axle nut ⑦.
- e. Loosen the rear wheel adjusting bolt

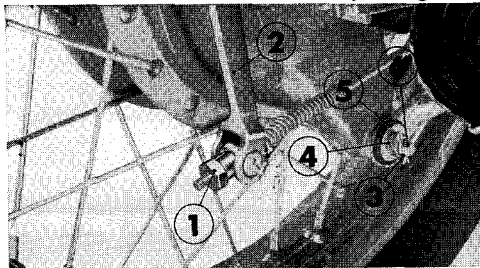

- ① Rear brake adjusting nut
- ② Brake arm
- ③ Lock pin
- ④ Nut
- ⑤ Washer
- ⑥ Bolt