



① Fuse holder

CAUTION:

Never substitute a fuse with wire or metal slug, or install a fuse of too large capacity. The fuse is provided to protect the electrical system and doing either of the above could result in severe damage to the system.

HEAD LIGHT BEAM ADJUSTMENT

The headlight must be properly adjusted for safe night driving in accordance with applicable regulations. This motorcycle has provisions to adjust the headlight beam in both the vertical and horizontal directions.

- a. Vertical adjustment is made by loosening the bolts ① which mount the headlight assembly. The headlight is normally adjusted in the vertical direction so that the center of the beam intersects the ground at the point 165 feet (50 m) in front of the motorcycle in the riding attitude.
- b. Horizontal beam adjustment is made with the adjusting screw ② located on the left side of the headlight when facing the motorcycle. Turning the screw in will focus the