


ESSENTIAL INDIVIDUAL COMPONENTS


IGNITION SWITCH

The ignition switch (1) is below the indicator panel.

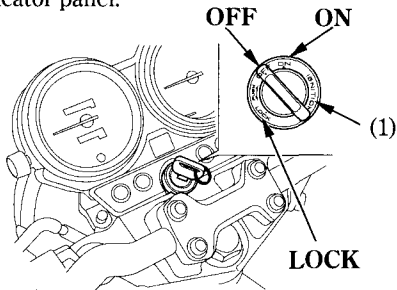

(1) Ignition switch

You should received a key number plate (2) with your key. You will need this key number if you ever have to replace a lost key. Store this plate in a safe place.

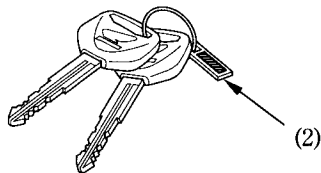

(2) Key number plate

| Key Position | Function | Key Removal |
|-------------------------|---|-----------------------|
| LOCK (steering lock) | Steering is locked. Engine and lights cannot be operated. | Key can be removed |
| OFF | Engine and lights cannot be operated. | Key can be removed |
| ON | Engine and lights can be operated. | Key cannot be removed |