

Instruments *(Continued)*

5 Setting of HISS indicator:

You can select the blink or off the HISS indicator.


- 1 Press the **SEL** button to select "On" (blinks) or "OFF" (off).



- 2 To end the selection, press the **SET** button. The HISS indicator setting is set, and then the display moves to the changing of speed and mileage unit.

6 Changing of speed and mileage unit:

- 1 Press the **SEL** button to select either "km/h" and "km" or "mph" and "mile".

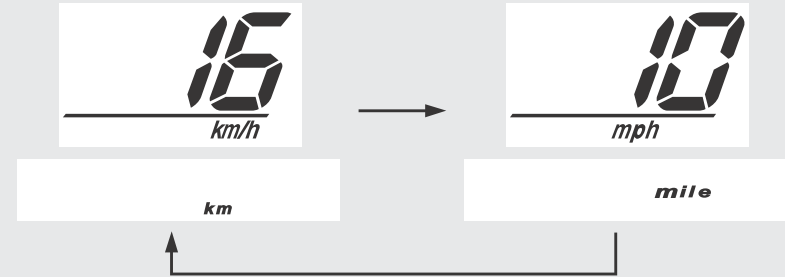

- 2 Press the **SET** button. The speed and mileage unit is set, and then the display moves to the changing of fuel mileage meter unit.