

Other Adjustments

Adjusting the Brake Lever

You can adjust the distance between the tip of the brake lever and the handle grip.

Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position.

After adjustment, check that the lever operates correctly before riding.

NOTICE

Do not turn the adjuster beyond its natural limit.

