


OPERATING INSTRUCTIONS

Instruments and Indicator Lights

The instruments are grouped together and mounted above the headlight case. The indicator lights are located between the instruments.

Their functions are shown in the table on the next pages.

Odometer and tripmeter read in accumulated miles, not kilometers.

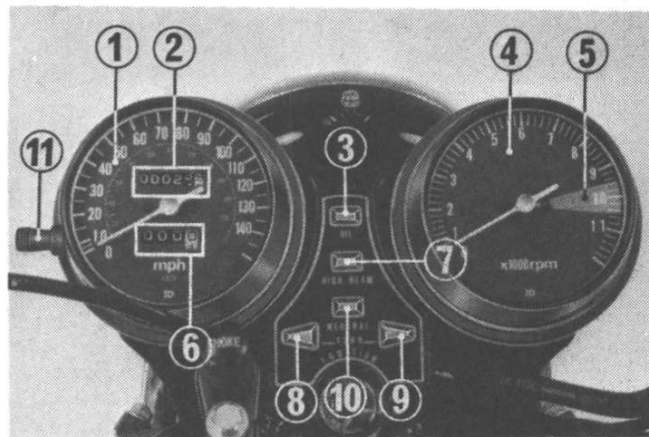

- (1) Speedometer
- (2) Odometer
- (3) Oil pressure warning light (red)
- (4) Tachometer
- (5) Tachometer red zone
- (6) Tripmeter
- (7) High beam indicator light (blue)
- (8) Left turn signal indicator light (amber)
- (9) Right turn signal indicator light (amber)
- (10) Neutral indicator light (green)
- (11) Tripmeter reset knob

