

Turn Signal Switch


The turn signal switch (2) (page 15) is located on the left handlebar grip switch housing. It can be operated without taking the hand off the handle grip. To signal a left turn move the switch to the “L” position. To signal a right turn move the switch to the “R” position. When the switch is moved within range (A) in the figure, turn signal lights flash. When the switch is moved beyond the range, the lights flash and warning buzzer sounds. This buzzer is provided to tell the rider that the light is still flashing after a turn is made.

Horn Button

The horn button (3) (page 15) is located on the left handlebar grip switch housing. When the horn button is pressed the horn will sound.

Steering Lock

The steering is locked when the ignition switch (1) is in “LOCK” position. Turn the handlebar all the way to the steering stop, either left or right. With the key at the “OFF” position, turn it counterclockwise to “LOCK” position while pushing in and remove the key. This locks the steering to help prevent theft. To unlock, only turn the key clockwise.

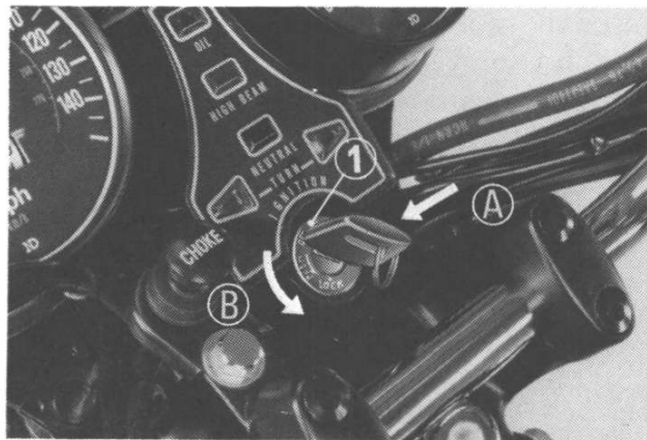

(1) Ignition switch
(A) Push in (B) Turn off