



element when cleaning the air cleaner element.

1. Remove the two air cleaner mounting bolts (1) and remove the air cleaner lower case (2) (page 51).
2. Clean the air cleaner element by tapping it lightly to loosen dust. The remaining dust can be brushed from the outer element surface or blown away by applying compressed air from the inside of the element.

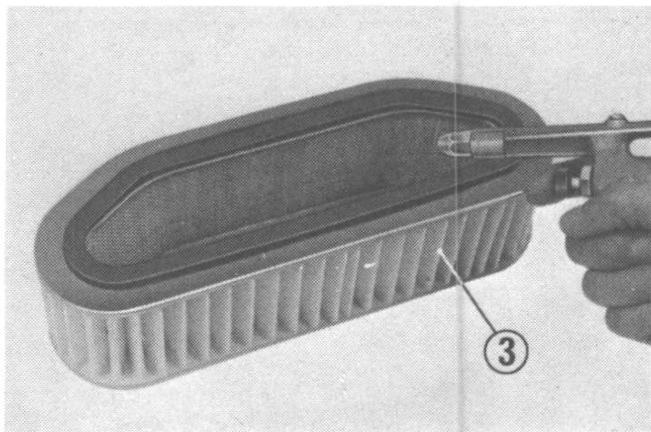

(3) Air cleaner element

3. Remove the left side cover, chain protector (4) and diode rectifier (5).
4. Remove the 6 mm breather element case mounting bolt (6), disconnect the breather tubes and remove the breather element case (7).
5. Remove the breather element (8) from the breather element case.
6. Wash the breather element (8) in clean

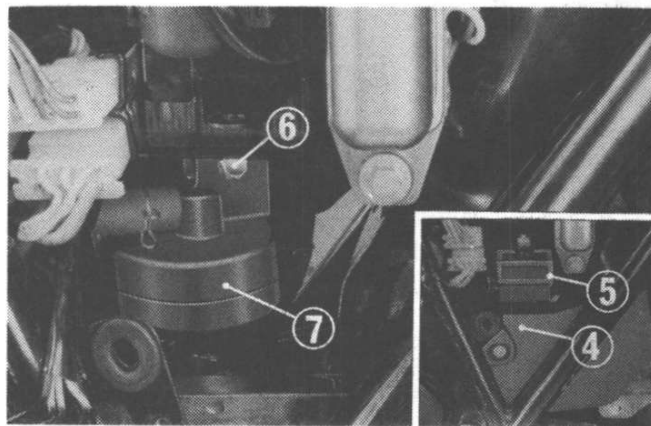

- (4) Chain protector
- (5) Diode rectifier
- (6) Breather element case mounting bolt
- (7) Breather element case