


## FUSE REPLACEMENT

(Refer to the maintenance precautions on page 50).

The main fuse ( 1 ), located on the starter magnetic switch ( 2 ) below the seat , is 30 A.

The spare main fuse (6) is located near the fuse box. The fuse box ( 4 ) is also located below the seat.

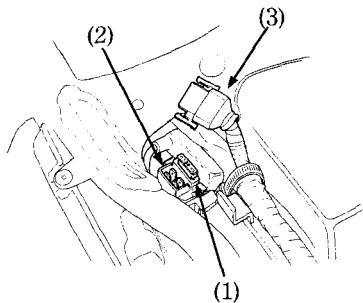


- (1) Main fuse      (2) Starter magnetic switch  
(3) Wire coupler

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:

**\* Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse ( 1 ), remove the right side cover (page 33), disconnect the wire coupler ( 3 ) and remove the old fuse. Install a new fuse and reconnect the wire coupler.

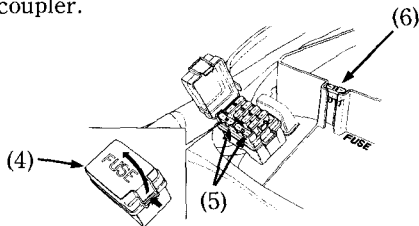

- (4) Fuse box      (5) Spare fuses  
(6) Spare main fuse