


■ MECHANICAL CONTROLS

● Steering Lock


This steering lock ① is located on the steering stem directly below the head light case. Turn the handle bar all the way to the steering stop, either to the left or right, insert the key into the lock turn key 60° to the left and press in, turn the lock to the original position and remove the key. This locks steering to prevent theft.

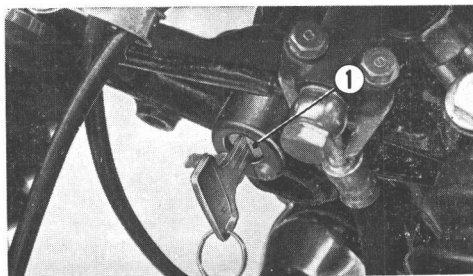


① Steering key lock

● Seat Lock

The seat lock ① is located at the left center of bottom side. To raise the seat insert the key into the lock and turn it counter-clockwise. The document box ② is built in the seat and its lid is accessible from bottom side by raising the seat.

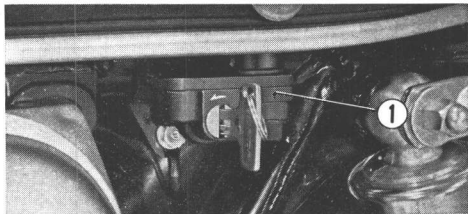

① Seat lock

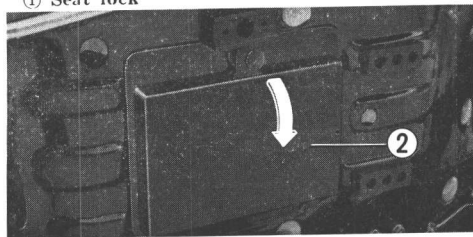

② Document box