


3. After performing the adjustment in section 1 and 2 above, if the proper idling speed cannot be obtained or if the exhaust back pressures from the cylinders are not uniform, have the engine readjusted by an authorized HONDA dealer.

NOTE: (1) Do not attempt to adjust the air screw or the top of the carburetor without referring to the shop manual and without the use of the proper gauge.


- (2) Replace the dust cap with new one every two years.

● Fuel Valve Strainer

The fuel strainer is incorporated in the fuel valve body ① which is mounted on the bottom side of the fuel tank at the right side. Accumulation of dirt in the strainer will restrict the flow of the fuel and cause the carburetors to malfunction, therefore, the fuel strainer should be serviced periodically. Turn control valve to "STOP" position and unscrew the strainer cup,

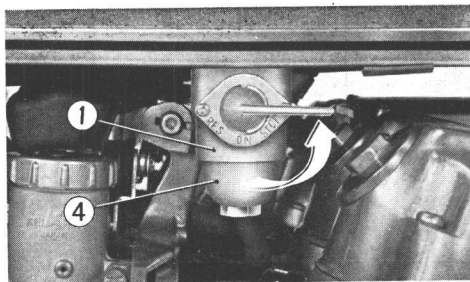

① Fuel valve body

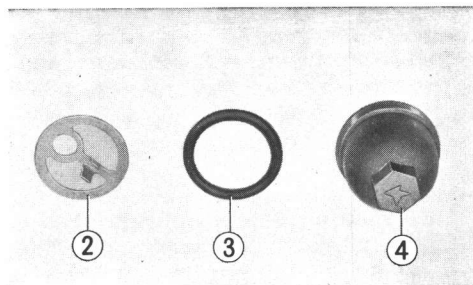

② Screen filter
③ O ring seal

④ Strainer cup