



the engine is still warm as this will assure complete and rapid draining.

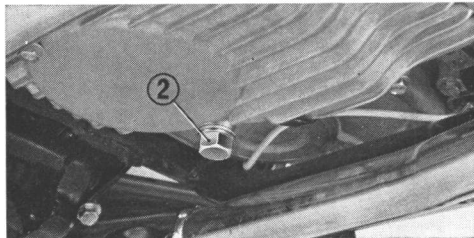

② Crankcase drain plug

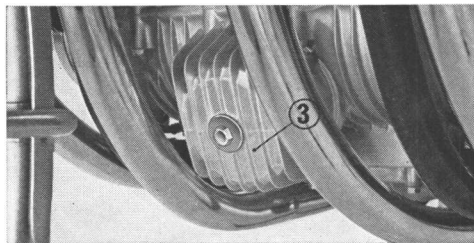

③ Oil filter cover

Perform the engine oil change in the following manner :

- a. Place an oil drain pan (1 gal.) under the oil tank to catch the oil. Remove the drain plug ① (page 37) with a 19 mm wrench and drain the oil. Place another oil drain pan under the crankcase, remove the crankcase drain plug ② with a 19 mm box wrench and drain the oil. Also remove the oil filter cover ③ and the filter element.
  - b. After draining the oil tank and the crankcase, operate the kick starter pedal several times to force out all residual oil remaining in the oil system passages.
  - c. When the oil has been completely drained, reinstall the crankcase and oil tank drain plugs, making sure that the drain plug seals are in good condition.
  - d. Install the **oil filter element** and tighten the filter cover making sure the cover seal is in good condition.
- At the 500 miles service remove and discard the original oil filter element