

## MAJOR COMPONENTS (Information you need to operate this motorcycle)

### CAUTION:

- \* *Make sure you perform the Pre-ride Inspection (Page 34) before you ride this motorcycle.*


### T.R.A.C. ANTI-DIVE ADJUSTER

The T.R.A.C. system reduces nose-dive during braking and may be adjusted to the rider's choice, independent of load or the rider's weight. The adjuster (1) is located on the left front fork and can be set to any one of your positions.

#### **WARNING**

- \* *Do not position the adjuster between the numbered adjustment points.*

Adjuster position	T.R.A.C. damper force
1	Light anti-dive
2	Medium
3	Hard
4	Maximum anti-dive

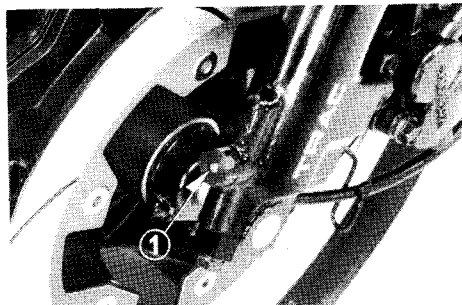

(1) Adjuster  
Adjuster shown set in the "2" position.