

Free play should be 20–30 mm (3/4–1-1/4 in). If adjustment is necessary, turn the rear brake adjusting nut (4).


NOTE:

- * Make sure the cut-out on the adjusting nut is seated on the brake arm pin.
- * If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.

4. Apply the brake several times and check for free wheel rotation when released.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.

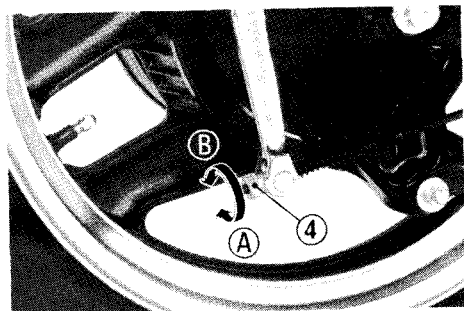

(4) Adjusting nut (A) Decrease free play
(B) Increase free play