


## Fuel Tank

Fuel tank capacity is 16.0 ℓ (4.2 US gal) including 2.5 ℓ (0.7 US gal) in the reserve supply.

To open the fuel tank cap (1), insert the ignition key (2) and turn it clockwise. The cap is hinged and will lift up. Any automotive gasoline with a pump octane number ( $\frac{R + M}{2}$ ) of 86 or higher

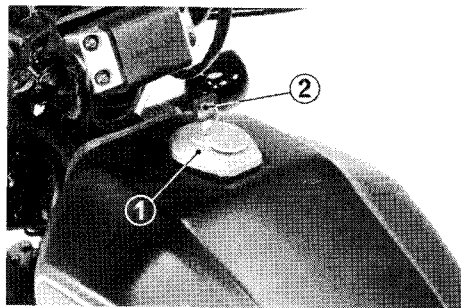

- (1) Fuel tank cap
- (2) Ignition key

or a research octane number of 91 or higher may be used. If “knocking” or “pinging” occurs, try a different brand of gasoline or a higher octane grade.

To close the fuel tank cap, press the cap into the filler neck until it snaps closed; the fuel tank cap locks automatically. Remove the key.

### **WARNING**

- \* *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the motorcycle is refueled or where gasoline is stored.*
- \* *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the fuel cap is closed securely.*