


FEATURES (Not required for operation)

STEERING LOCK

To lock the steering, turn the handlebars all the way to the left, turn the key (1) to LOCK while pushing in. Remove the key.

WARNING

* Do not turn the key to LOCK while riding the motorcycle.

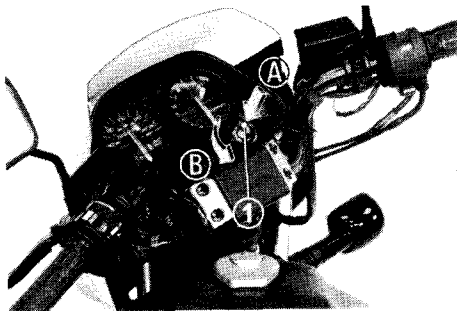


(1) Ignition key (A) Push in
(B) Turn to LOCK

HELMET HOLDER

The helmet holder (1) is on the right side under the seat. Insert the ignition key (2) and turn it counterclockwise to unlock the seat lock (3). Pull the seat lock lever (4) up and remove the seat. Hang your helmet on the helmet holder (1) and install the seat.

WARNING

* The helmet holder is designed for use while parking. Do not operate the motorcycle with a helmet attached to the holder. The helmet may interfere with the rear wheel, possibly stopping the wheel.

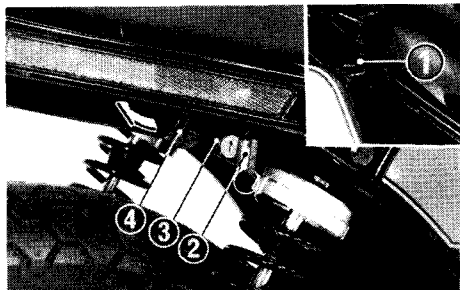

(1) Helmet holder (3) Seat lock
(2) Ignition key (4) Seat lock lever