

## ENGINE OIL AND FILTER


Engine oil quality is the chief factor affecting engine service life. Change the engine oil and filter when specified by the maintenance schedule.

### NOTE:


- \* Change the engine oil and filter with the engine warm and the motorcycle on its center stand to assure complete and rapid draining.

### CAUTION:

- \* To prevent oil leaks and filter damage, never support the engine on the oil filter.
1. To drain the oil, remove the oil filler cap engine bottom oil drain plug (1) and right and left frame oil drain plugs (2).
  2. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter (3).
  3. Check that the new oil filter O-ring is in good condition. Apply a thin coat of engine oil to the new oil filter rubber seal (4).

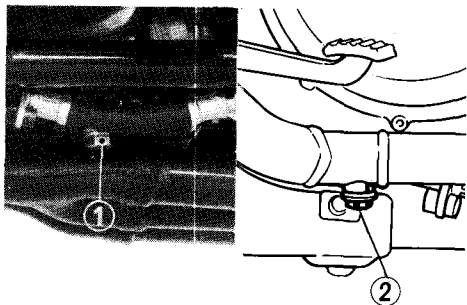

- (1) Engine bottom oil drain plug
- (2) Frame oil drain plug

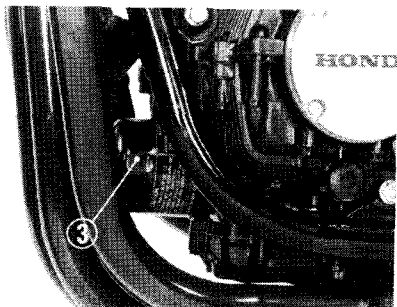

- (3) Oil filter