

## FINAL DRIVE OIL

Change the oil when specified by the maintenance schedule.

### NOTE:

\* Change the oil with the final drive warm and the motorcycle on its center stand to assure complete and rapid draining.

1. To drain the oil, remove the oil filler cap (1) and drain plug (2).
2. After the oil has completely drained, check that the sealing washer (3) on the drain plug is in good condition and install the drain plug.


Drain Plug Torque:

10–14 N·m

(1.0–1.4 kg-m, 7–10 ft-lb)

3. Fill the final drive with approximately 150 cc (4.9 oz) of the recommended oil. Make sure the recommended oil reaches a level between the two bosses on the inner housing (visible below the lower edge of the inspection hole).
4. Install the oil filler cap.

Recommended oil: **HYPOID GEAR OIL**  
**SAE80**

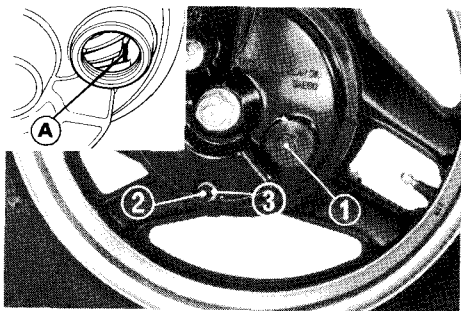

(1) Oil filler cap  
(2) Oil drain plug

(3) Sealing washer  
(A) Two bosses