

## HANDLEBARS

The handlebars on this motorcycle may be adjusted by the rider for width. Because of the critical nature of steering, consult your authorized Honda dealer for this adjustment.

Width adjustment:

1. Loosen the handlebar attaching bolts (1) with the wrench provided in the tool kit.
2. Rotate the handlebars to match the rider's desired riding position. Be sure to adjust both handlebars to the same position, using the set screw (2) on each handlebars and hole in the handlebar holder (3) as a reference.
3. Securely tighten the handlebar attaching bolts (1) with the wrench.


### WARNING

\* *For your safety, see your dealer as soon as possible to verify proper assembly.*

*Handlebar attaching bolt torque:*

*25–30 N·m (2.5–3.0 kg·m, 18–22 ft·lb)*

- \* *Check the security of the handlebars and bolts by turning both handlebars all the way to the left and right, and pushing and pulling on the handlebars with force.*
- \* *Check to be sure that the wires, hoses, and cables are not kinked or pulled taut, and are free to move in all steering positions.*

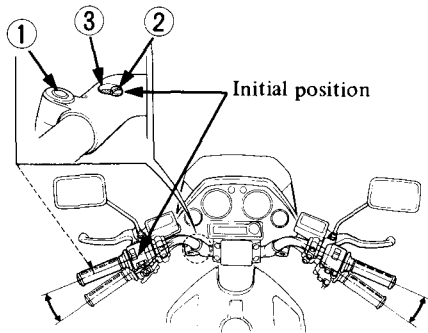

(1) Attaching bolts

(3) Hole

(2) Set screw