

## FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.


The fuel tank does not require draining.

### To raise:

1. Place the motorcycle on its side stand with the transmission in neutral and the ignition switch off.
2. Remove the right and left side covers (page 58).
3. Remove both air cleaner covers (1) by removing the bolts (2).
4. Loosen the pivot bolt (3) and slide the fuel tank to the rear of the motorcycle.
5. Lift up the front end of the fuel tank and move the fuel tank so as to allow the fuel tank stays (4) under the fuel tank rest on the rubber mounts (5) on the frame.

Do not raise the fuel tank higher than the wire allows.

6. Tighten the pivot bolt.

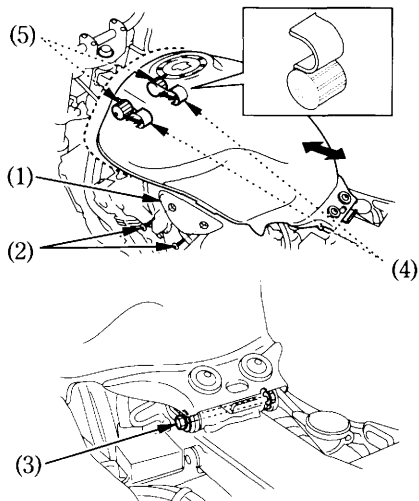

- |                       |                   |
|-----------------------|-------------------|
| (1) Air cleaner cover | (4) Tank stays    |
| (2) Bolts             | (5) Rubber mounts |
| (3) Pivot bolt        |                   |