


AIR CLEANER

Refer to the Safety Precautions on page 76 .

The air cleaner should be serviced at regular intervals (page 78) . Service more frequently when riding in unusually wet or dusty areas.


1. Remove the left side cover (page 58) .
2. Remove the attaching screws (1) and air cleaner housing cover (2) .

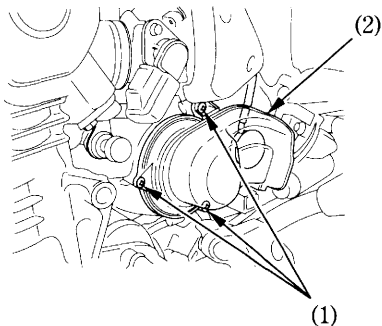

3. Pull out the air cleaner (3) and clean the air cleaner using compressed air from the outside, or replace it if necessary.
4. Install a new air cleaner.

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

5. Install the removed parts in the reverse order of removal.

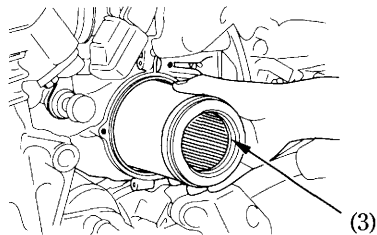

- (1) Attaching screws
(2) Air cleaner housing cover

- (3) Air cleaner