




3. Remove the front axle bolt (3), and then loosen the axle pinch bolt (4).
4. Remove the front wheel.

**NOTE:**

\* Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

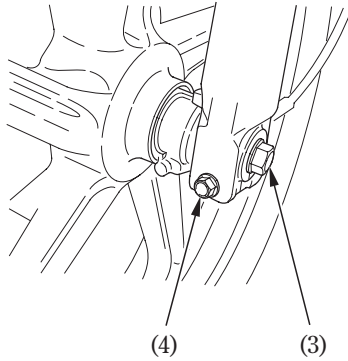

- (3) Front axle bolt
- (4) Axle pinch bolt

