

## **MAINTENANCE**

Page

|    |                                      |
|----|--------------------------------------|
| 62 | MAINTENANCE                          |
| 62 | The Importance of Maintenance        |
| 63 | Maintenance Safety                   |
| 64 | Safety precautions                   |
| 65 | Maintenance Schedule                 |
| 68 | Tool Kit                             |
| 69 | Serial Numbers                       |
| 70 | Colour Label                         |
| 71 | Engine Oil                           |
| 75 | Crankcase Breather                   |
| 76 | Spark Plugs                          |
| 78 | Throttle Operation                   |
| 79 | Idle Speed                           |
| 80 | Air Cleaner                          |
| 81 | Coolant                              |
| 82 | Drive Chain                          |
| 87 | Drive Chain Slider                   |
| 88 | Front and Rear Suspension Inspection |
| 89 | Side Stand                           |
| 90 | Wheel Removal                        |
| 96 | Brake Pad Wear                       |
| 98 | Battery                              |

Page

|     |                               |
|-----|-------------------------------|
| 101 | Fuse Replacement              |
| 105 | Brake Light Switch Adjustment |
| 106 | Bulb Replacement              |

## 111 CLEANING

## 115 STORAGE GUIDE

|     |                      |
|-----|----------------------|
| 115 | Storage              |
| 117 | Removal from Storage |

## 118 SPECIFICATIONS

## 122 CATALYTIC CONVERTER