

### High Air Temperature

35 °C (95 °F) or above

1. Do not use the choke.
2. Start the engine.

### Low Air Temperature

10 °C (50 °F) or below

1. Follow steps 1-2 under “Normal Air Temperature”.
2. When engine speed starts to increase activate the choke to maintain fast idle at: 1500 - 2000 min<sup>-1</sup> (rpm)
3. Continue to warm up the engine until it is running smoothly, responding correctly to the throttle and with the choke knob (1) pressed fully in.

#### NOTICE

Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.