


License light bulb

1. Remove the two screws (1).
2. Remove the license light bulb (2).
3. Remove the bulb (3) without turning it.
4. Install a new bulb in the reverse order of removal.

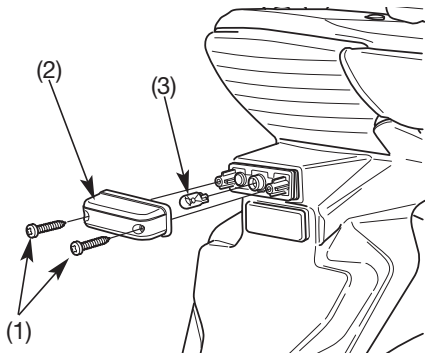

- (1) Screws
(2) License light bulb
(3) Bulb