

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (1)]							REFER TO PAGE
			x 1,000 km	1	6	12	18	24	30	
		EVERY	MONTH	x 1,000 mi	0.6	4	8	12	16	
DRIVE CHAIN			I, L, EVERY 1,000 km (600 mi)							136
BATTERY				I	I	I	I	I	I	144
BRAKE FLUID	(NOTE 5)			I	I	I	I	I	I	144
BRAKE PAD WEAR				I	I	I	I	I	I	146
BRAKE SYSTEM			I		I		I		I	144-148
* BRAKE LIGHT SWITCH					I		I		I	184
* HEADLIGHT AIM					I		I		I	
CLUTCH SYSTEM					I		I		I	134
CLUTCH FLUID	(NOTE 5)			I	I	I	I	I	I	134
SIDE STAND					I		I		I	152
* SUSPENSION					I		I		I	150
* NUTS, BOLTS, FASTENERS			I		I		I		I	
** WHEELS/TIRES					I		I		I	
** STEERING HEAD BEARINGS			I		I		I		I	

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

NOTES:

1. For higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding in dusty areas.
3. Service more frequently when riding in rain or a full throttle.
4. Replace every 36,000 km (24,000 mile) or every 2 year whichever comes first.
5. Replace every 18,000 km (12,000 mile) or every 2 year whichever comes first.