

## Front/Rear Turn Signal Bulb

### **▲ WARNING**

- \* The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

### **CAUTION:**

- \* Wear clean gloves while replacing the bulb.
- \* If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.

### **NOTE:**


- \* Be sure to turn the ignition switch OFF when replacing the bulb.

### <FRONT>

1. Remove the lid (page 41).
2. Turn the socket (1) 90° counterclockwise, then pull it out toward you.
3. Slightly press down on the bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

### **NOTE:**

- \* Do not use bulbs other than that specified.
- \* After installing a new bulb, check that the light operates properly.

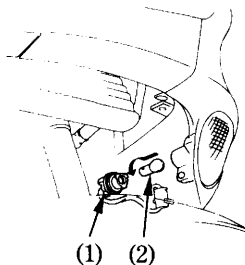

(1) Socket

(2) Bulb