

5. Remove the crankcase cover (5) by removing the three socket bolts (6).
6. Remove the two bolts (7).
7. Remove the lower fairing cover (8) by removing the screw (9).
8. Remove the screw (10).
9. Remove the short mount socket bolt (11).
10. Remove the clip (12) from the plate (13).
11. Remove the three long mount socket bolts (14) while holding the lower fairing.
12. Remove the lower fairing.

Installation:

1. Installation can be done in the reverse order of removal.

- | | |
|-------------------------|------------------------------|
| (5) Crankcase cover | (11) Short mount socket bolt |
| (6) Socket bolts | (12) Clip |
| (7) Bolts | (13) Plate |
| (8) Lower fairing cover | (14) Long mount socket bolts |
| (9) Screw | |
| (10) Screw | |

