

### Installation Notes:


- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (6) on the brake caliper is located in the slot (7) in the swingarm (8).
- Tighten the axle nut to:  
91 N·m (9.3 kgf·m , 67 lbf·ft)
- Adjust the drive chain (Page 76).
- Apply the brake several times and check for free wheel rotation after the brake pedal is released.
- Brake system inspection (See page 91).

### **CAUTION:**

- **When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.**
- **After installation, operate the brake pedal and check the brake operation.**

### **▲WARNING**

- **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

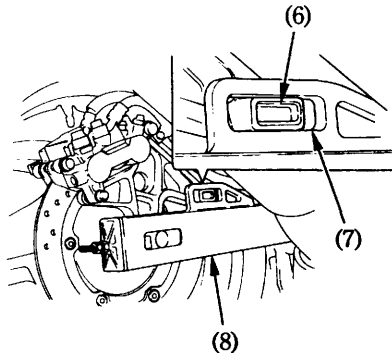

(6) Lug  
(7) Slot

(8) Swing arm