


INNER LOWER COWL

Removal:

Remove the bolt (1) and clips (2).

Installation:

- Installation can be done in the reverse order of removal.

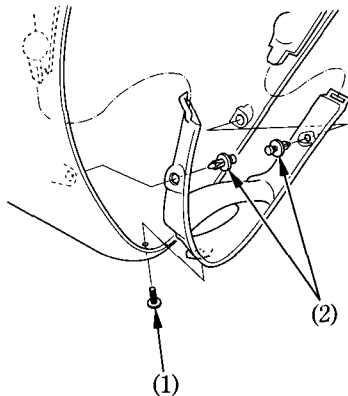

- (1) Bolt
- (2) Clips