

Fuel Mileage Meter

The fuel mileage meter includes the following functions:


- Current fuel mileage
- Average fuel mileage
- Fuel consumption

The indication mode of the current and average fuel mileage can be selected km/l and l/100 km (page 40).

< E type only >

The unit of the indication depends on the unit which you select (page 39).

When the odometer (5) or tripmeter A (6) is displayed, press control button B (7) to select any mode of the fuel mileage meter. Press control button A (8) to change the indication to the odometer or tripmeter A.

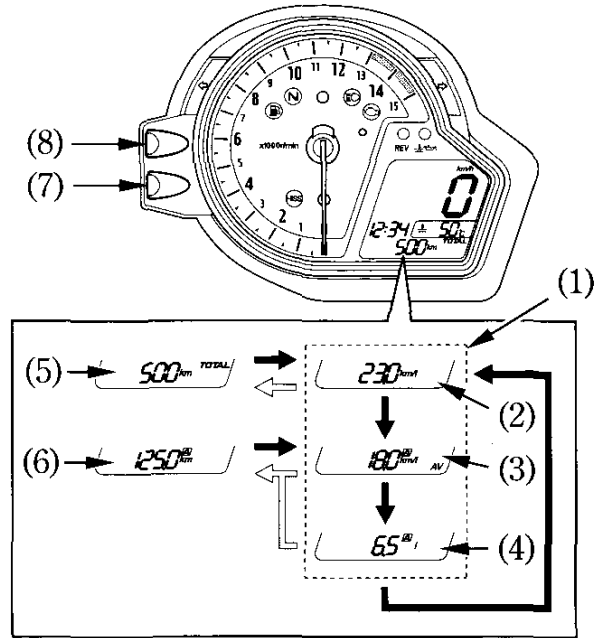

- ⇒ :Press control button A
- ➔ :Press control button B

- (1) Fuel mileage meter
- (2) Current fuel mileage
- (3) Average fuel mileage
- (4) Fuel consumption
- (5) Odometer
- (6) Tripmeter A
- (7) Control button B
- (8) Control button A