

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
* FUEL LINE					I		I		I	—	
* THROTTLE OPERATION					I		I		I	94	
* AIR CLEANER	NOTE (2)					R			R	—	
SPARK PLUGS			EVERY 24,000 km (16,000 mi) I, EVERY 48,000 km (32,000 mi) R								89–93
* VALVE CLEARANCE							I			—	
ENGINE OIL			R		R		R		R	85–88	
ENGINE OIL FILTER			R		R		R		R	86–88	
* ENGINE IDLE SPEED			I	I	I	I	I	I	I	95	
RADIATOR COOLANT	NOTE (3)				I		I		R	31–32	
* COOLING SYSTEM					I		I		I	—	
* SECONDARY AIR SUPPLY SYSTEM					I		I		I	—	