
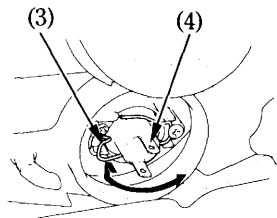


## Headlight Bulb

1. Remove the upper cowl cover (page 60 ).
2. Pull out the socket ( 1 ) without turning.
3. Remove the dust cover ( 2 ).
4. Remove the bulb ( 4 ) while pressing down on the pin ( 3 ).
5. Pull out the bulb ( 4 ) without turning.
6. Install a new bulb in the reverse order of removal.
  - Install the dust cover with its “TOP” mark facing up.

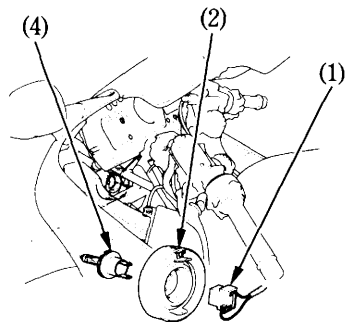

(1) Socket  
(2) Dust cover

(3) Pin  
(4) Bulb