



7. Move the radiator (8) out of the way and remove the grommet (10) from the radiator stay (9).
8. Pull the radiator toward the front.

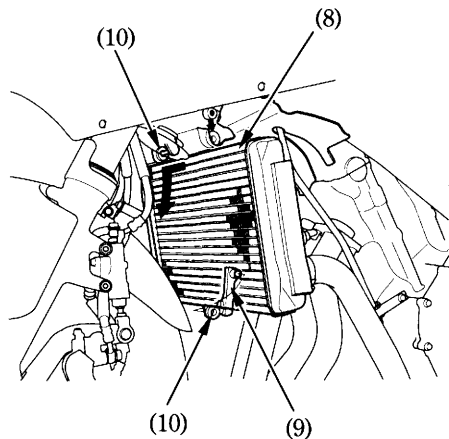

- (8) Radiator
(9) Radiator stay
(10) Grommet

9. Disconnect the spark plug caps from the spark plugs.
10. Clean any dirt from around the spark plug bases. Remove the spark plugs using the plug wrench (11) furnished in the tool kit.
11. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner.

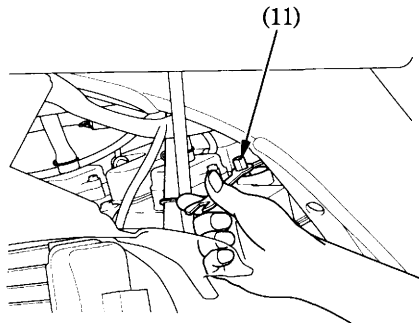

- (11) Spark plug wrench