SPARK PLUGS

(Refer to the maintenance precautions on page 70).

Recommended plugs:

CR9EHVX - 9 (NGK)

This motorcycle uses the spark plugs that have a platinum coated center electrode. Be sure to observe the following when servicing the spark plugs.

- Do not use wire brush to clean the electrodes. If the electrode is contaminated with accumulated objects or dirt, clean the electrode using a "plug cleaner".
 Consult your Honda dealer for this service.
- Use only "wire-type feeler gauge" to check the spark plug gap to prevent damaging the platinum coating of the center electrodes. Never use "leaf-type feeler gauge".
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

- 1. Remove the lower cowl (page 46).
- 2. Remove the upper cowl cover (page 48).
- 3. Remove the wing guard (page 49).
- 4. Remove the inner panel (page 50).