

HEADLIGHT AIM

⚠ WARNING


An improperly adjusted headlight may blind on-coming drivers, or it may fail to light the road for a safe distance.

NOTE:

Adjust the headlight beam as specified by local laws and regulations.

Place the motorcycle on a level ground.

Adjust the headlight beam vertically by loosening the screw and move the headlight unit.

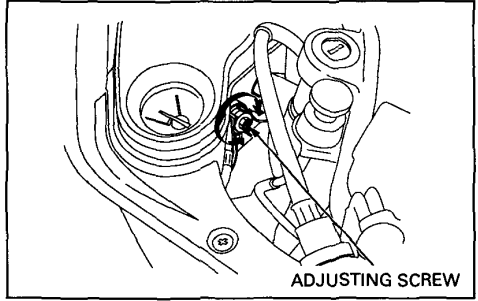


CLUTCH SYSTEM

Check the cable and clutch lever for loose connections, excessive play, or other damage. Replace or repair if necessary. Inspect the clutch cable for kinks or damage, and lubricate the cable.


Measure the free play at the tip of the clutch lever.

FREE PLAY: 10 – 20 mm (3/8 – 13/16 in)

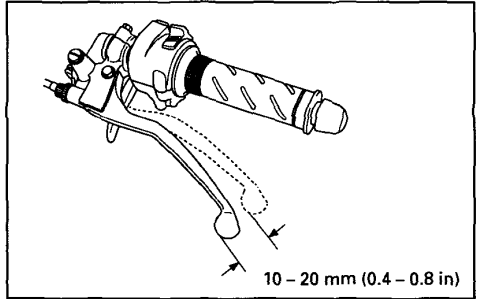

Adjust as follows:

Minor adjustment can be done with the upper adjuster. Loosen the lock nut and turn the adjuster. After adjustment, tighten the lock nut.

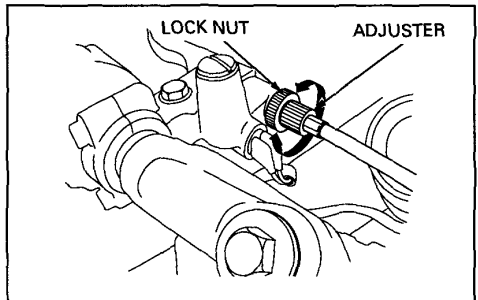

Major adjustment are made with the lower adjusting nut. If the major adjustment is required, turn the upper adjuster all the way in and back out 1 turn. Loosen the lock nut and adjusting nut and turn the adjusting nut to adjust free play. Tighten the upper and lower lock nuts. Check the clutch operation.

If the free play cannot be obtained, or the clutch slips during test ride, disassemble and inspect the clutch (section 8).

